

Seats

■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat


■ Adjusting lumbar support



- 1 Firmer
- 2 Softer

Head Restraints

Vertical adjustment (front seats)

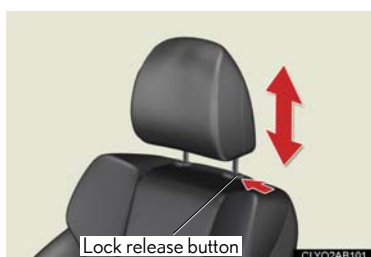

To raise: push the head restraint upward.

To lower: push the head restraint down while pressing the lock release button.

Folding (rear seats only)



Pull the head restraint up while pressing the lock release button.

Seat Belts

Adjusting shoulder belt height (front seats only)



To raise: push the anchor upward.

To lower: depress the button and push the anchor down.

Seat belt comfort guides (rear seats only)



If the shoulder belt sits close to the neck, slide the comfort guide forward.